




Technical Bulletin # 1

Proper Installation of the Jack Handle

For Compac Models: OLE 46, EuroSport, Long Reach and 3T-C

The handle on a Compac jack is not only designed for lifting, but also for releasing the jack. When the handle is mounted properly, you then pull up and twist the handle clockwise for the jack to release and lower the saddle height. Following are the proper installation instructions for the handle:

- 1.) Install the handle into the base ensuring that the "L" shaped hole at the end of the handle (C) faces toward the hole in the handle base (B).
- 2.) Tighten the screw (A) into the handle base. The tip of screw (A) will fit into the "L" shaped hole in the handle.
- 3.) The screw should tighten easily if it is lined up properly. If there is resistance, do not force the screw in. Re-check the screw for proper alignment.

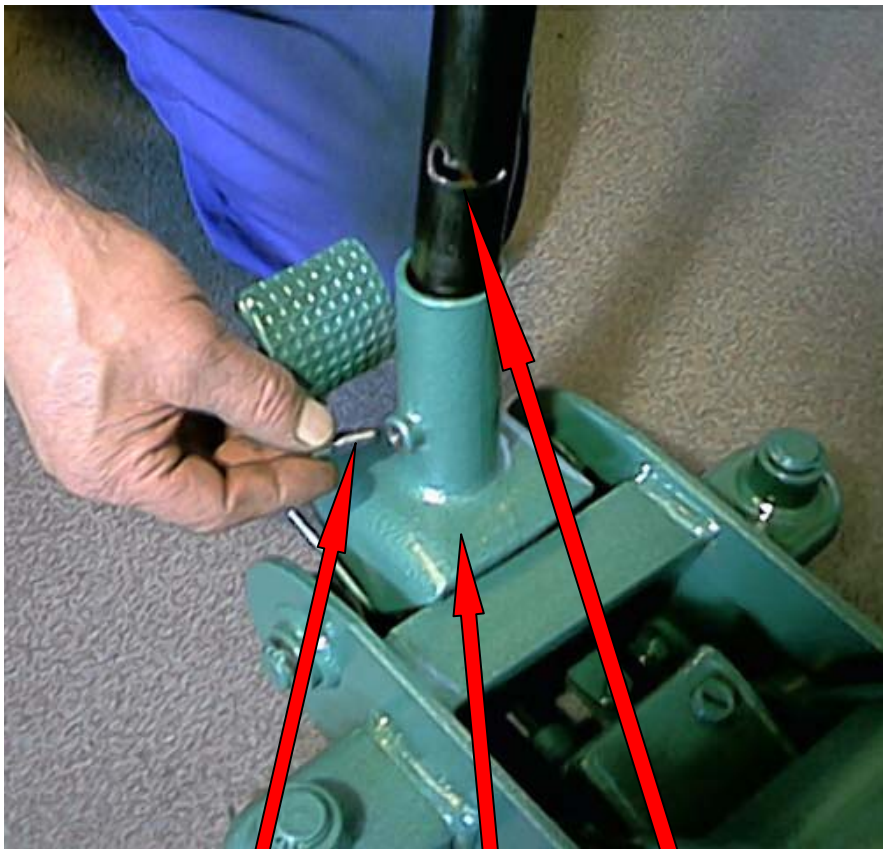

A

B

C

A : Screw

B : Handle base

C : Handle