



Technical Bulletin # 2


The jack will not lift the load: The jack creeps down under load:

For Compac Models: OLE 46, EuroSport, Long Reach and 3T-C

4 simple steps will take you 60 seconds

Tools: 7/16 Wrench and Small Hammer

- 1.) Lift up and twist the handle, releasing the jack.
- 2.) With the handle in this position, pump the foot pedal 10 to 15 times to flush the hydraulic system.
- 3.) Turn the handle back to start position and tap the release rod (A) at the end gently with a small hammer using, approximately, 5 pounds of force).
- 4.) Turn the outer nut (B) on the release rod one time clock wise.

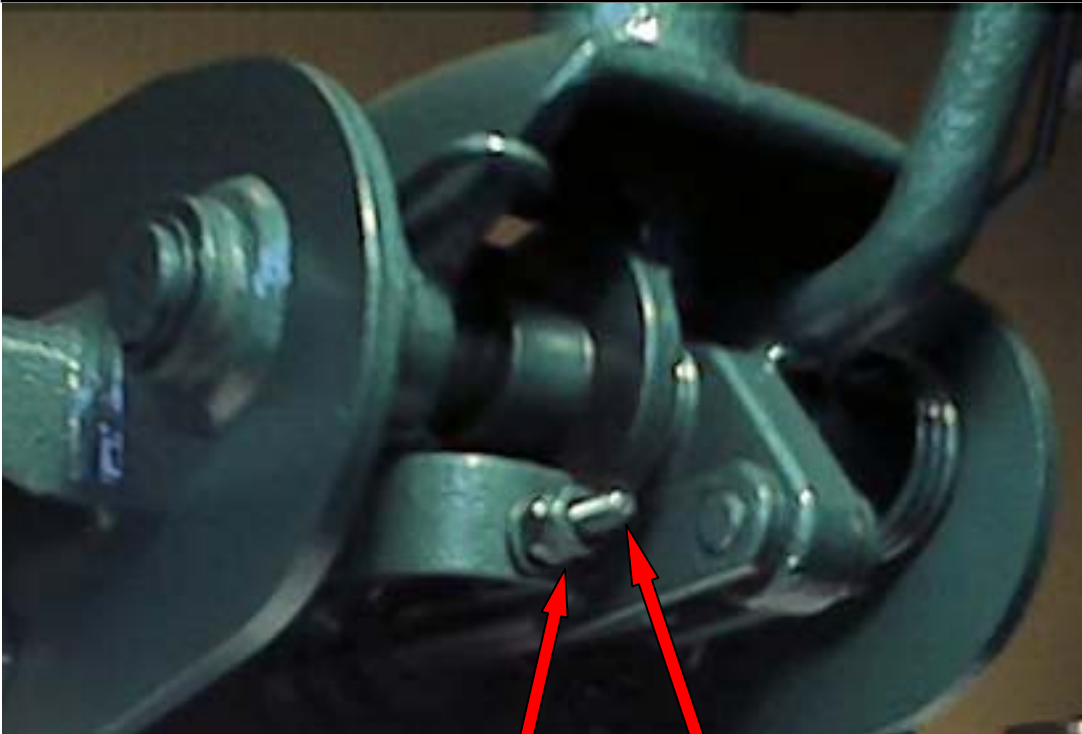

A : Release Rod

B : Nut

B

A